Dell™ Systems

Power Supply Upgrade Installation

安装电源设备升级


Installation du module d'alimentation mis à niveau

Montage von Netzteilen (Aufrüstung)

電源アップグレードキットの取り付け

전원 공급 장치 업그레이드 설치

Instalación de la actualización de fuente de alimentación

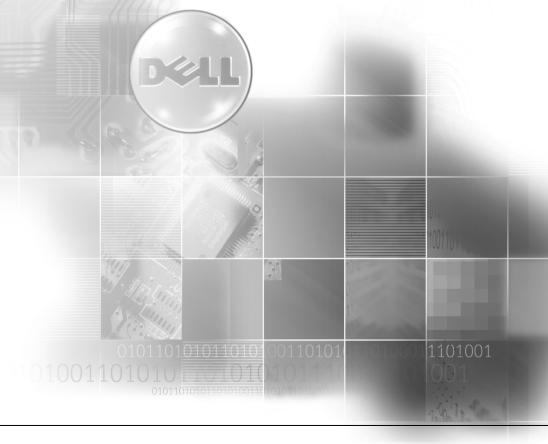



Power Supply Upgrade Installation



Notes, Notices, and Cautions



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice. © 2002 Dell Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Computer Corporation is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Computer Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

To upgrade your system with a single power supply to a fully redundant configuration with two hot-pluggable power supplies, you must remove the plastic plug from the secondary power connector at the back of the system, connect a power cable to the secondary power connector, and install an additional hot-pluggable power supply.

CAUTION: See "Protecting Against Electrostatic Discharge" in the safety instructions in your System Information Guide.

- **1** Unpack the redundant power supply customer kit.
- **2** Open the bezel.
- **3** Use a plastic, flat-tip screwdriver to remove the plastic cover over the unoccupied power supply bay on the front panel.
- 4 Insert the power supply into the unoccupied front-panel bay until it clicks in place (see Figure 1-1).


 



Figure 1-1. Installing a Power Supply

functioning properly (see Figure 1-1).

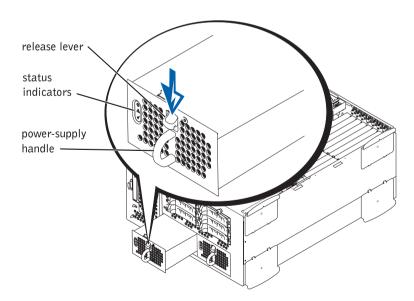

- **5** Close the bezel.
- Remove the plastic plug from the secondary power connector by pulling the tab (see Figure 1-2).

Figure 1-2. Power Connectors

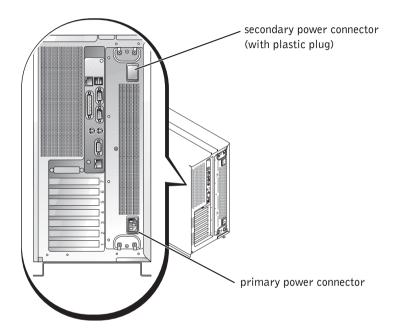

- 7 Connect the power cable supplied with your kit to the secondary power connector.
- Connect the power cable to a known good AC power source.
- If you have any difficulties, see "Troubleshooting Your System" in your Installation and Troubleshooting Guide.