



# Index

## A

- alert log messages, 3-5
- assistance
  - getting, 10-1
  - telephone numbers, 10-6
  - warranty repair or credit, 10-4
- AutoTech service, 10-3
- avoiding interrupt assignment
  - software, 4-2

## B

- back-panel
  - connectors, 2-2
- basic I/O functions
  - troubleshooting, 6-3
- battery
  - removing, 8-13
  - replacing, 8-13
- beep codes, 3-4

## C

- calling Dell, 10-6
- CD-ROM drive
  - installing, 9-4

- connectors
  - back-panel, 2-2
  - troubleshooting, 2-2
- cooling fans
  - removing, 7-10
  - replacing, 7-10
  - troubleshooting, 7-10

## D

- damaged system, 7-6
- Dell Diagnostics
  - creating diskettes, 5-2
  - Device Groups menu, 5-3
  - features, 5-1
  - using, 5-3
- diagnosing problems, 10-1
- Diagnostics Checklist, 10-5
- diagnostics. *See* Dell Diagnostics
- DIMMs
  - configurations, 8-6
- diskette drive
  - installing, 9-4
  - troubleshooting, 7-17

## **E**

- error messages
  - types of, 4-2
- errors
  - input, 4-2
  - program conflicts, 4-2
- expansion cards
  - illustrated, 8-2
  - removing, 8-2
  - troubleshooting, 7-12

## **F**

- forgotten password
  - disabling, A-3
- front bezel
  - illustration, 7-2
  - removing, 7-2
  - replacing, 7-2
- front panel
  - illustrated, 2-5
  - indicators, 2-6
  - switches, 2-7

## **G**

- getting help, 10-1

## **H**

- hard-disk drive
  - installing, 9-3
  - removing, 9-2
- hard-disk drives
  - illustration, 9-1
  - troubleshooting, 7-18
- help
  - getting, 10-1

- help tools
  - AutoTech service, 10-3
  - Internet, 10-2
  - TechFax service, 10-3

## **I**

- I/O
  - connections, 2-2
- indicators
  - illustrated, 2-6
- input errors, 4-2
  - software, 4-2
- installing
  - CD-ROM drive, 9-4
  - diskette drive, 9-4
  - hard disk drive, 9-3
  - memory modules, 8-5
  - microprocessor, 8-10
- installing and configuring software, 4-1
- integrated NICs
  - troubleshooting, 6-6
- Internet help tools, 10-2
- IRQ lines, 4-2

## **J**

- jumpers
  - about, A-1
  - illustrated, A-2
  - settings (table), A-2

## **K**

- keyboard
  - connector, 2-2
  - troubleshooting, 6-2

## **M**

- memory
  - replacing, 8-7
  - troubleshooting, 7-13
- memory modules
  - installing, 8-5
  - removing, 8-9
  - upgrading, 8-5
- messages
  - alert log, 3-5
- microprocessor
  - installing, 8-10
  - removing, 8-10
  - replacing, 8-12
- monitor
  - troubleshooting, 6-1
- mouse
  - connector, 2-2

## **N**

- network cable requirements, 6-7
- NIC
  - connector, 2-2

## **P**

- password
  - disabling, A-3
- POST beep codes, 3-4
- power sources
  - troubleshooting, 2-3
- power supply
  - removing, 7-8
  - replacing, 7-8
  - troubleshooting, 7-7

- problems
  - diagnosing, 10-1
  - fixing, 10-1
  - help tools, 10-1
  - with your order, 10-3
- product information, 10-4
- program conflicts, 4-2
  - software, 4-2

## **R**

- removing
  - battery, 8-13
  - cooling fans, 7-10
  - expansion cards, 8-2
  - front bezel, 7-2
  - hard-disk drive, 9-2
  - memory modules, 8-9
  - microprocessor, 8-10
  - power supply, 7-8
  - riser board, 8-4
  - system cover, 7-2
- replacing
  - battery, 8-13
  - cooling fans, 7-10
  - front bezel, 7-2
  - memory, 8-7
  - microprocessor, 8-12
  - power supply, 7-8
  - riser board, 8-4
  - system cover, 7-3
- returns, 10-4
- riser board
  - removing, 8-4
  - replacing, 8-4

## **S**

- safety precautions, 7-1
- safety, regulatory, and warranty
  - information, 1-1

- serial I/O devices
  - troubleshooting, 6-4
- serial port
  - connectors, 2-2
- service, 10-1
- software
  - analyzing problems, 4-1
  - avoiding interrupt assignment, 4-2
  - configuring, 4-1
  - error messages, 4-2
  - input errors, 4-2
  - installing, 4-1
  - program conflicts, 4-2
  - using, 4-2
- support
  - technical, 10-1
- switches
  - illustrated, 2-7
  - troubleshooting, 2-2
- system
  - front bezel, 7-2
  - front panel, 2-5
  - interior layout, 7-4
- system battery
  - replacing, 8-13
  - troubleshooting, 7-6
- system board
  - connectors, A-3
  - illustrated, 8-1
  - jumpers, A-2
  - troubleshooting, 7-16
- system cover
  - removing, 7-2
  - replacing, 7-3
- system memory
  - troubleshooting, 7-13
- System Setup program, 2-8

## **T**

- TechFax service, 10-3
- technical assistance
  - obtaining, 10-1
  - warranty repair or credit, 10-4
- troubleshooting
  - basic I/O functions, 6-3
  - basic problems, 2-1
  - beep codes, 3-4
  - connectors, 2-2
  - cooling fans, 7-10
  - damaged system, 7-6
  - Diagnostics Checklist, 10-5
  - diskette drive, 7-17
  - expansion cards, 7-12
  - hard-disk drives, 7-18
  - integrated NICs, 6-6
  - Internet tools, 10-2
  - keyboard, 6-2
  - messages and codes, 3-1
  - monitor, 6-1
  - power supply, 7-7
  - safety precautions, 7-1
  - serial I/O devices, 6-4
  - switches, 2-2
  - system battery, 7-6
  - system board, 7-16
  - system memory, 7-13
  - USB devices, 6-5
  - video subsystem, 7-15
  - wet computer, 7-5

## **U**

- upgrading
  - memory modules, 8-5
- USB
  - connector, 2-2
- USB devices
  - troubleshooting, 6-5

## **V**

- video
  - connector, 2-2
- video subsystem
  - troubleshooting, 7-15

## **W**

- warranty repair or credit, 10-4
- water damage, 7-5
- World Wide Web help tools, 10-2

