



Contents

Chapter 1	Introduction.	1-1
	Safety, Regulatory, and Warranty Information	1-1
Chapter 2	Checking the Basics	2-1
	Backing Up Files	2-1
	Basic Checks	2-1
	Checking Connectors and Switches	2-2
	Look and Listen	2-4
	Removing the Optional Front Bezel	2-4
	Front-Panel Features	2-5
	System Indicators	2-6
	System Switches	2-7
	System Setup Program	2-8
Chapter 3	Messages and Codes	3-1
	System Messages	3-1
	POST Beep Codes	3-4
	Diagnostics Messages	3-5
	Alert Log Messages From the Dell OpenManage Server Agent	3-5
Chapter 4	Finding Software Solutions.	4-1
	Installing and Configuring Software.	4-1
	Using Software	4-2
	Error Messages	4-2
	Input Errors.	4-2
	Program Conflicts.	4-2
	Avoiding Interrupt Assignment Conflicts	4-2

Chapter 5

Running the Dell Diagnostics 5-1

Features of the Dell Diagnostics	5-1
When to Use the Dell Diagnostics	5-2
Starting the Dell Diagnostics	5-2
How to Use the Dell Diagnostics	5-3
How to Use the Device Groups Menu	5-3
Device Groups Menu Options	5-3
Run Tests	5-4
Devices	5-4
Select	5-5
Config	5-5
Error Messages	5-5

Chapter 6

Checking the Equipment 6-1

Troubleshooting the Monitor	6-1
Troubleshooting the Keyboard	6-2
Troubleshooting the Basic I/O Functions	6-3
Troubleshooting a Serial I/O Device	6-4
Troubleshooting USB Devices	6-5
Troubleshooting the Integrated NICs	6-6
Network Cable Requirements	6-7

Chapter 7

Checking Inside the System 7-1

Safety First—For You and Your System	7-1
Removing and Replacing the Optional Front Bezel	7-2
Removing the Optional Front Bezel	7-2
Replacing the Optional Front Bezel	7-2
Opening the System Cover	7-2
Replacing the System Cover	7-3
Inside the System	7-4
Troubleshooting a Wet System	7-5
Troubleshooting a Damaged System	7-6
Troubleshooting the Battery	7-6
Troubleshooting the Power Supply	7-7
Power Supply Removal and Replacement	7-8
Troubleshooting a Cooling Fan	7-10
Troubleshooting Expansion Cards	7-12
Troubleshooting System Memory	7-13
Troubleshooting the Video Subsystem	7-15
Troubleshooting the System Board	7-16
Troubleshooting the Diskette Drive Subsystem	7-17
Troubleshooting Hard-Disk Drives	7-18

Chapter 8	Installing System Board Options 8-1
	Expansion Cards 8-2
	Removing an Expansion Card. 8-2
	Installing an Expansion Card. 8-4
	Removing and Replacing the Riser Board 8-4
	Memory Modules 8-5
	Memory Module Installation Guidelines. 8-5
	Memory Installation and Replacement. 8-7
	Memory Module Removal 8-9
	Replacing the Microprocessor. 8-10
	Removing the Microprocessor and Heat Sink 8-10
	Microprocessor and Heat Sink Assembly Replacement 8-12
	Replacing the Battery 8-13
 Chapter 9	 Installing Drives 9-1
	Hard-Disk Drives 9-1
	Hard-Disk Drive Removal 9-2
	Hard-Disk Drive Installation 9-3
	Diskette Drive and CD-ROM Drive 9-3
 Chapter 10	 Getting Help 10-1
	Technical Assistance 10-1
	Help Tools 10-2
	World Wide Web 10-2
	AutoTech Service 10-3
	TechFax Service 10-3
	Automated Order-Status System. 10-3
	Technical Support Service 10-3
	Problems With Your Order 10-3
	Product Information. 10-4
	Returning Items for Warranty Repair or Credit 10-4
	Before You Call 10-4
	Dell Contact Numbers 10-6
 Appendix A	 Jumpers and Connectors. A-1
	Jumpers—A General Explanation A-1
	Jumpers A-1
	System Board Jumpers A-2
	System Board Connectors. A-3
	Disabling a Forgotten Password A-3

Abbreviations and Acronyms

Index

Figures

Figure 2-1.	Back-Panel Connectors	2-2
Figure 2-2.	Removing the Optional Front Bezel.	2-5
Figure 2-3.	Front-Panel Features	2-5
Figure 2-4.	Front-Panel Indicators	2-6
Figure 2-5.	Front-Panel Indicators (Bezel Removed)	2-6
Figure 2-6.	Front-Panel Switches	2-7
Figure 7-1.	Removing the Bezel	7-2
Figure 7-2.	Opening the System Cover.	7-3
Figure 7-3.	Inside the System	7-4
Figure 7-4.	Power Supply Removal	7-9
Figure 7-5.	Removing a Cooling Fan	7-11
Figure 8-1.	System Board Features	8-1
Figure 8-2.	PCI Retention Panel Removal	8-2
Figure 8-3.	Expansion Card Removal.	8-3
Figure 8-4.	Riser Board Removal.	8-5
Figure 8-5.	DIMM Sockets.	8-6
Figure 8-6.	DIMM3 Installation	8-8
Figure 8-7.	DIMM Installation	8-9
Figure 8-8.	DIMM Removal	8-10
Figure 8-9.	Microprocessor and Heat Sink Removal	8-11
Figure 8-10.	Microprocessor and Heat Sink Replacement	8-12
Figure 8-11.	Installing the Battery	8-14
Figure 9-1.	Drive Locations	9-1
Figure 9-2.	Hard-Disk Drive and Bracket Removal.	9-2
Figure 9-3.	Hard-Disk Drive Removal From Bracket	9-3
Figure 9-4.	Diskette Drive and CD-ROM Drive Removal.	9-4
Figure 10-1.	Diagnostics Checklist	10-5
Figure A-1.	Jumper	A-1
Figure A-2.	System Board Jumpers.	A-2

Tables

Table 2-1.	Front-Panel Indicators	2-7
Table 2-2.	Front-Panel Switches.	2-8
Table 3-1.	System Messages.	3-1
Table 3-2.	System Beep Codes	3-4
Table 4-1.	IRQ Line Assignment Defaults	4-3
Table 5-1.	Options	5-4
Table 5-2.	Devices Options	5-5
Table 8-1.	Sample DIMM Configurations	8-6

Table 10-1.	International Dialing Codes	10-7
Table 10-2.	Dell Contact Numbers	10-8
Table A-1.	System-Board Jumper Settings	A-2
Table A-2.	System Board Connectors and Sockets	A-3

