



Index

A

- advanced menu options, 3-6
 - boot configuration, 3-6
 - diskette configuration, 3-7
 - event log configuration, 3-7
 - IDE configuration, 3-6
 - peripheral configuration, 3-6
- asset tag
 - creating, 2-3

B

- BIOS Setup Utility, 3-4
- boot menu options, 3-8
 - 1st to 8th boot, 3-8
 - after power failure, 3-8
 - IDE drive configuration, 3-8
 - on LAN, 3-8
 - on modem ring, 3-8
 - on PME, 3-8
 - quick boot, 3-8
 - quiet boot, 3-8

C

- connections
 - I/O, 1-6

- connectors
 - keyboard, 1-6
 - LAN, 1-6
 - mouse, 1-6
 - NIC, 1-6
 - USB, 1-6
- creating an asset tag, 2-3
- creating diagnostic diskettes, 2-3

D

- Dell OpenManage Server Assistant* CD
 - navigating, 2-2
 - Server Setup mode, 2-2
 - service mode, 2-1
 - setup mode, 2-1
 - starting, 2-1
- diagnostic diskettes
 - creating, 2-3

E

- entering the System Setup program, 3-1
- error messages, 3-2
- exit menu, 3-9
- exit menu options, 3-9
 - discard changes, 3-9
 - exit discarding changes, 3-9
 - exit saving changes, 3-9

exit menu options (*continued*)

- load custom defaults, 3-9

- load setup defaults, 3-9

- save custom defaults, 3-9

F

features, 1-1

front panel

- indicators, 1-3

front panel, illustrated, 1-3

G

getting help, 1-8

I

I/O connections, 1-6

K

keyboard connector, 1-6

L

LAN connector, 1-6

M

main menu

- screen options, 3-4

- setup screen, 3-4

main menu options, 3-4

- BIOS version, 3-4

- cache RAM, 3-5

- language, 3-5

- memory bank 0, 3-5

main menu options (*continued*)

- memory bank 1, 3-5

- memory bank 2, 3-5

- memory bank 3, 3-5

- memory configuration, 3-5

- processor serial number, 3-5

- processor speed, 3-5

- processor type, 3-4

- system date, 3-5

- system time, 3-5

- total memory, 3-5

main screen options, 3-4

main setup screen, 3-4

microprocessors, 1-1

- Intel Celeron, 1-1

- Intel Pentium III, 1-1

mouse connector, 1-6

N

NIC connectors, 1-6

O

operating systems, 1-2

operating with a user password enabled,
3-14

P

password

- supervisor, 3-12

passwords

- disabling, 3-15

processors, 1-1

- Intel Celeron, 1-1

- Intel Pentium III, 1-1

R

- responding to error messages, 3-2
- running system diagnostics, 2-2

S

- securing your system, 3-11
- security menu options, 3-7
 - clear user password, 3-8
 - set supervisor password, 3-7
 - set user password, 3-7
 - supervisor password is, 3-7
 - user access level, 3-8
 - user password is, 3-7
- serial port connectors, 1-6
- setting up your server, 2-2
- supervisor password
 - assigning, 3-10
 - changing, 3-12
 - deleting, 3-12
 - using, 3-9, 3-12
- system diagnostics
 - running, 2-2
- system features, 1-1
- system management menu, 3-9
- system management menu options, 3-9
 - baud rate, 3-9
 - flow control, 3-9
 - serial console redirection, 3-9
- system setup
 - entering, 3-1
 - menus, 3-4
 - options, 3-4
 - using, 3-1

- system setup options, 3-2, 3-4
 - advanced menu, 3-6
 - boot menu options, 3-8
 - exit menu, 3-9
 - main screen, 3-4
 - navigation keys, 3-2
 - security menu, 3-7
 - system management menu, 3-9

- System Setup program
 - entering, 3-1
 - responding to error messages, 3-2
 - using, 3-1, 3-2
- system setup screens
 - advanced, 3-4
 - boot, 3-4
 - exit, 3-4
 - main, 3-4
 - security, 3-4
 - system management, 3-4

U

- USB connector, 1-6
- user password
 - assigning, 3-13
 - changing, 3-14
 - deleting, 3-14

V

- video subsystem, 1-1

