



Dell™ PowerEdge™ 840 Systems Information Update

This document provides updated information for your system on the following topic:

Using the Setup Password

When a setup password is enabled for the System Setup program, the system gives you one chance to enter the setup password correctly. If you enter the password incorrectly, the system displays an error message and opens the System Setup program for viewing only. You will not be able to change any of the System Setup fields except for the system password. If you have already entered the system password during the current session, you can change the system password if the **Password Status** field is set to **Unlocked**. To change the **Password Status** field from **Locked** to **Unlocked**, you must enter the correct setup password.

Information in this document is subject to change without notice.
© 2006 Dell Inc. All rights reserved. Printed in Malaysia.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

September 2006



0FJ099A00