


READ THIS FIRST

IMPORTANT: PRIOR TO OPERATION OF THE DELL™ POWERVAULT™ 112T Rack Enclosure

This unit has preventative measures built in to the power button on the front panel to eliminate the possibility of inadvertent power cycling of the device.

The power up sequence is as follows:

1. Ensure the power switch on the rear of the unit is in the on position. →
2. Press and HOLD the power button on the front panel for one second.
3. The front panel LEDs will come on indicating the unit is powered on properly.

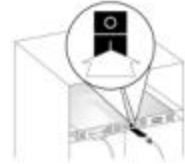

The power down sequence is as follows:

1. Press and HOLD the power button on the front panel for approximately five seconds.
2. When the LEDs on the front panel go off, the unit is powered down.
3. Remember to shut off the switch on the rear of the unit prior to servicing the Dell PowerVault 112T Rack Enclosure.

Information in this document is subject to change without notice. Copyright 2002. Dell Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Computer Corporation is strictly forbidden.

Trademarks used in this text: "Dell" and "PowerVault" are trademarks of Dell Computer Corporation. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

June 2002